

## Programming Speed Dial for DR5 rls Norstar.

### Speed Dial **Feature 0**

#### Make a Speed Dial call

You can quickly dial external telephone numbers that have been programmed onto Speed Dial codes.

1. Press **Feature 0**
2. Enter the appropriate two-digit Speed Dial code.  
Norstar supports two types of Speed Dial codes, Personal and System. System Speed Dial codes are from 01 to 70. The System Administrator can assign numbers to System Speed Dial codes for the entire system in Administration programming. Personal Speed Dial codes are from 71 to 94 and may have different numbers assigned to them on each telephone. Users can program their own Personal Speed Dial numbers.

#### Program Personal Speed Dial **Feature \*4**

You can add or change a Personal Speed Dial number on your - telephone.

1. Press **Feature \*4**
2. Enter the code that you want to associate with a telephone
3. number.  
If you want to include a line selection for this number, select the line or line pool. For the M7100 Telephone, you can select a line only.
4. Enter the number you want to program.
5. Press **OK** or **Hold**.

Final step call Sunrise Solutions to talk about an upgrade. ☺