
Finding the IP address of your BCM

The following instructions will enable you to find out what IP address is assigned to LAN port 1 of your BCM. This LAN port is usually the port that is used to connect your BCM to your office LAN.

M7310
M7324
T7316
T7316e

Cannot use any of the following:

M7100
M7208
T7100
T7208

Without lifting the handset press the Feature key and dial 9 * 8.

1. **At User ID:** press 738662 (setnna) and press ok under the display.
2. **At Pswd:** press 266344 (config) and press ok under the display.
3. **At Feature Codes:** Press Next.
4. **At User Accounts:** Press Next.
5. **IP Address:** Press OK.
6. **At DHCP: Disabled;** Press IP:
7. What is on your display now is the IP address assigned to LAN port 1.
8. Press Release to end.