


Norstar terminals M7310 and M7324 with overlays

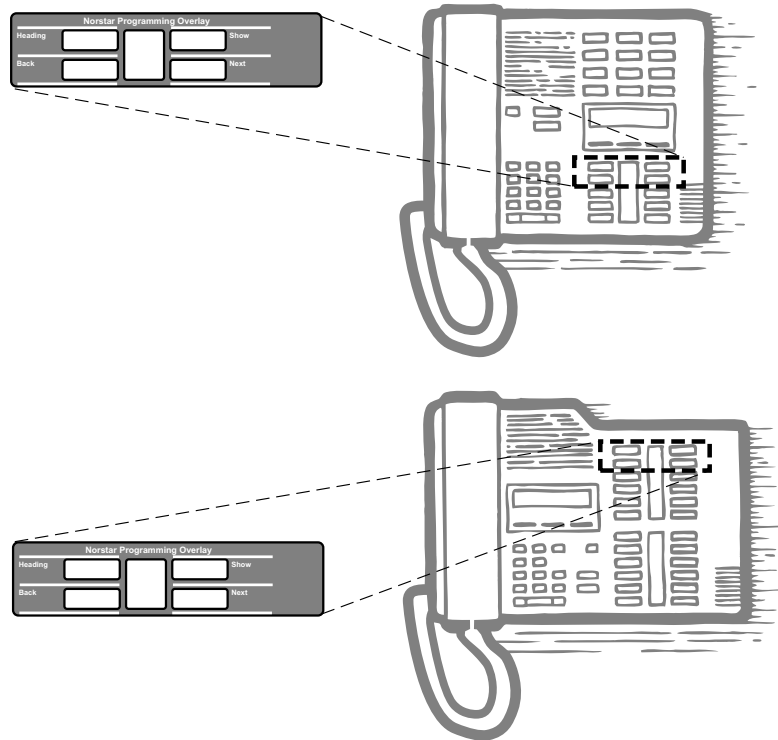


Using the telephone buttons for programming

On the overlay, each of the four programming buttons is assigned an action feature.

The indicators (▶) on the display beside the buttons show which buttons are active at each programming step. Press the appropriate button to move up or down through the Norstar programming menu.

The table below describes the action of each button.

Telephone overlay button definitions

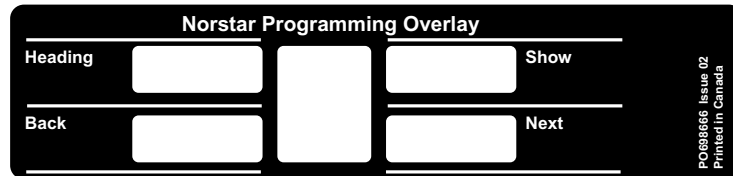

- moves to a higher level in the hierarchy of headings and subheadings.
- moves to a lower level in the hierarchy of headings and subheadings, or begins programming for a heading or subheading.
- moves backward at the same level in the hierarchy of headings and subheadings.
- moves forward at the same level in the hierarchy of headings and subheadings.

Special characters on the display

When a heading ends with a triangle (▸), you can press

to view the subheadings for that item.

When a heading ends with an ellipsis (...), you can press

to see further information about that heading.

The display buttons

Display buttons on the telephones perform a number of functions, depending on where you are in programming. Up to three display button messages may be available at any time.