

---

## Changing the Name Display for Sets – Norstar

Programming can only be done from one of the following phone types. You can find out the type of phone you are using by looking at the sticker on the bottom of the phone. Use Attached Overlays to assist in programming

M7310  
M7324  
T7316  
T7316e

Without lifting the handset press the **Feature** key and dial **\*\*266344**.

At Password dial **266344**

At Terminals & Sets: Press **SHOW**

At **SHOW** set: Enter the Extension # of the phone you wish to change

At XXX: NNN Where XXX is the Extension and NNN is the Name or Extension number Press **SHOW**

At Line Access: Press **NEXT** 2 times

At Name: XXX or NNN Press the Change button under the display and using the dial pad change the name. Use th keys under the display to move to the next letter or BKSP to Backspace. You have up to 7 Characters.

When name is complete press the **NEXT** key.

The Name: NNN will show again, this time with the correct name.

At this point you can press the Release key to end programming.