
To setup system speed dial access:

Note: ‘Enter’ Key is the key that is just left of the scroll key; 3rd soft key from right.

1) Enable customer programming

- a) Press Transfer
- b) Press 200
- c) Press 12341
- d) Press Transfer

2) Setup speed dial entries (Program 705)

- a) Press transfer
- b) Press 705
- c) Enter bin # (i.e. 500-999)
- d) Dial telephone number: 9-1-area code-number
(if there are no more speed entries to be made: continue to e; if there are more entries to be made press enter & repeat c & d till done)
- e) Press Transfer

3) Setup speed dial names (Program 706)

- a) Press transfer
- b) Press 706
- c) Enter bin # (i.e. 500-999)
- d) Spell out the name: (ex: 2=A, 22=B, 222=C, 2222=2)
Use volume up/down keys to enter space or move cursor
*(if there are no more speed names to be made: continue to e;
if there are more entries to be made press enter & repeat c & d till done)*
- e) Press Transfer

4) Disable programming mode

- a) Press Transfer
- b) Press 200
- c) Press 12340
- d) Press Transfer