
Programming Date & Time on a Samsung OfficeServ 7100 Series System

Without lifting the handset, press Transfer; This will put you in Programming mode.

At Enter Pgm ID: enter 800

Passcode: 4321

Disable: press 1 – Disable will change to enable

Press Speaker button

At 801: Tec. Passcode Select Prog ID: Enter 505

You will see the following –

Old: 5102110 : 1551 = (Friday, October 21, 2010 : 3:15 PM)

New: WMMDDYY : HHMM

A Curser will be under the W; at this point enter the day of the WWeek followed by MMonth, DDay, YYear : HHour and MMinute.

Use the following as a guide.

W Day of week 0 – 6 (0=Sun, 1=Mon, 2=Tue, 3=Wed, 4=Thur, 5=Fri, 6=Sat)

MM Month 01 – 12

DD Date 01 – 31

YY Year 00 – 99

HH Hour 00 – 23

MM Minute 00 – 59

Press Transfer to end programming