
Accessing the Web-based Configuration Utility

The instructions below are for a UCx system that is still at a Default state. If Installed by **Sunrise Solutions Inc.** please contact us at 410-573-0555 for this information has been changed to match your LAN IP Scheme, and the Login credentials have been changed for Security purposes.

1. Launch a browser and enter the UC^x ip address <http://192.168.1.200>
2. Login using default factory credentials:
 - Username = **admin**
 - Password = **emetr0tel** (please note that the '0' is a numeric zero)

