

---

## UCx Hotdesking – Digital Sets

**1. Picture of a Unregistered phone.  
Press HDesk Button**




**2. Enter Ext # and press Enter;  
Example 108**



**3. Enter Password, 1234 and  
press Enter.**



**4. Phone is now Hotdesked to Extension  
number you entered in Step 2.**

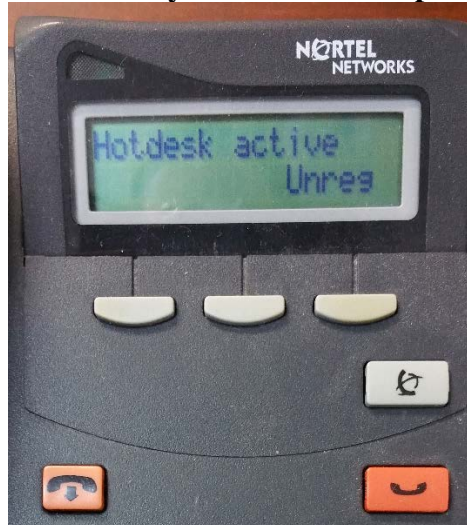

**\*Note: In this example 1234 was entered in Extension Programming as the Hotdesking password.**